

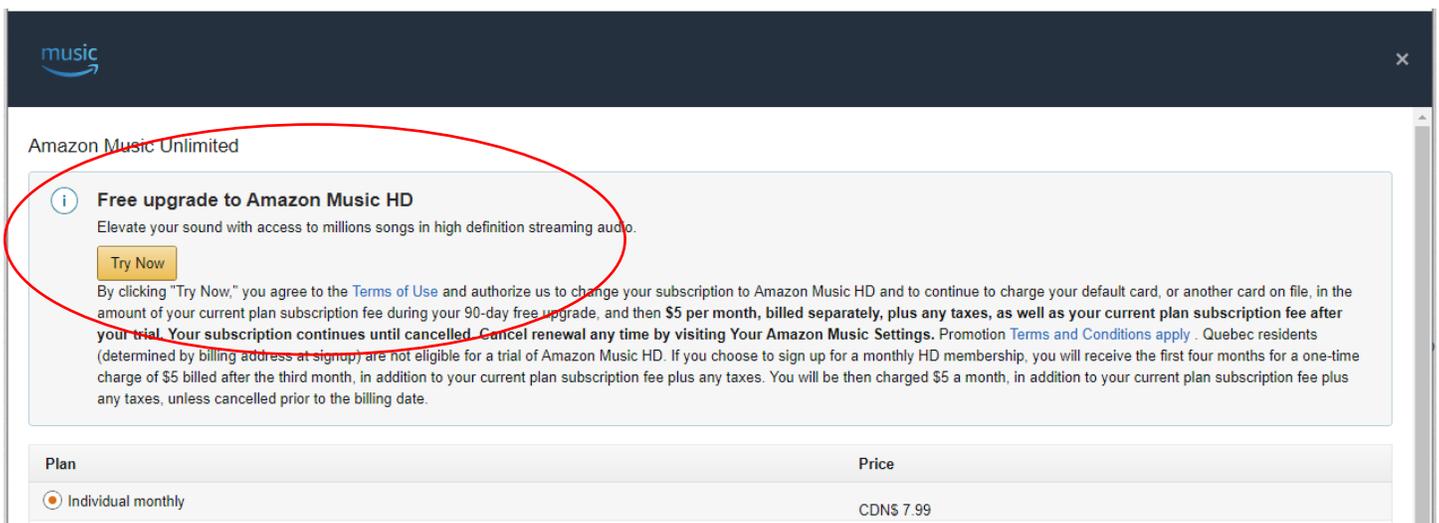



- 1 Connect the THX Onyx™ to one of your computer's USB ports, then plug your headphones into the THX Onyx.
- 2 For Windows PC you will need to configure THX Onyx as a 24-bit, 192 or 176.4 kHz device. You can do this under **Control Panel > Sound > Playback**, or follow our detailed instructions here thx.com/thx-onyx-for-windows.
- 3 Launch the Amazon Music for PC app.
- 4 Under Music Settings, make sure you have an HD account; if not, select **Manage Subscription** and upgrade to the Amazon Music HD plan.

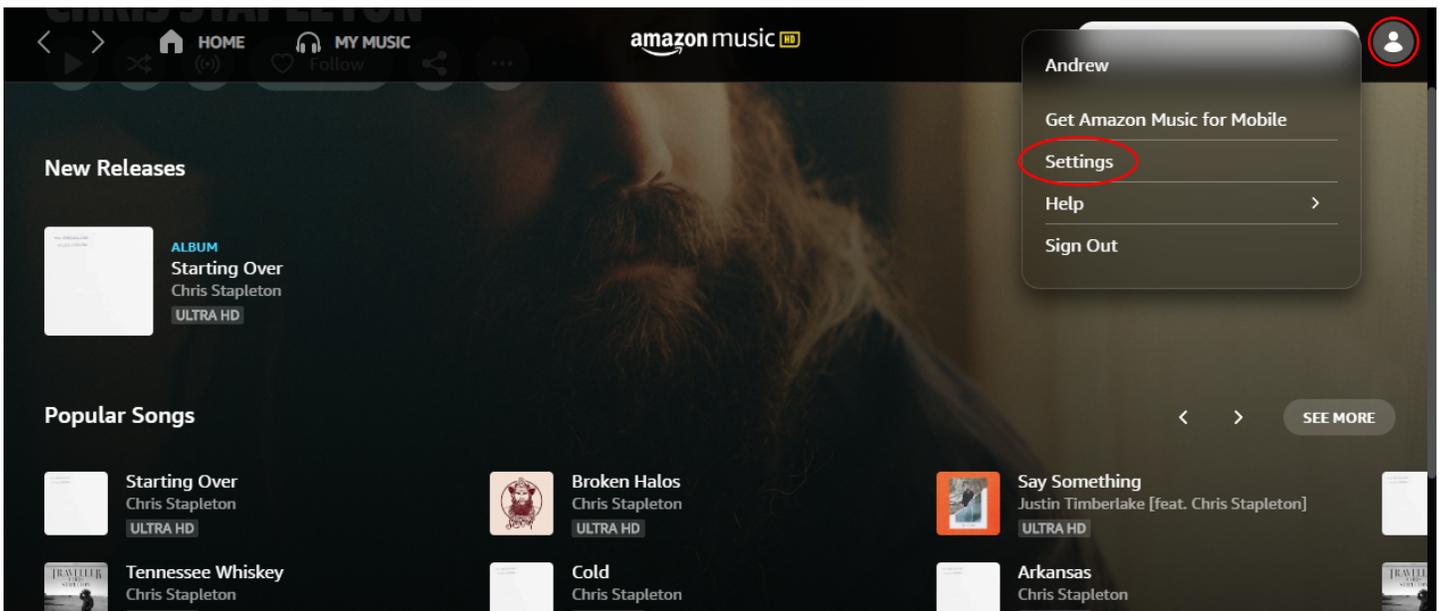


5 In the user icon menu, choose Settings and select **Audio Quality**.

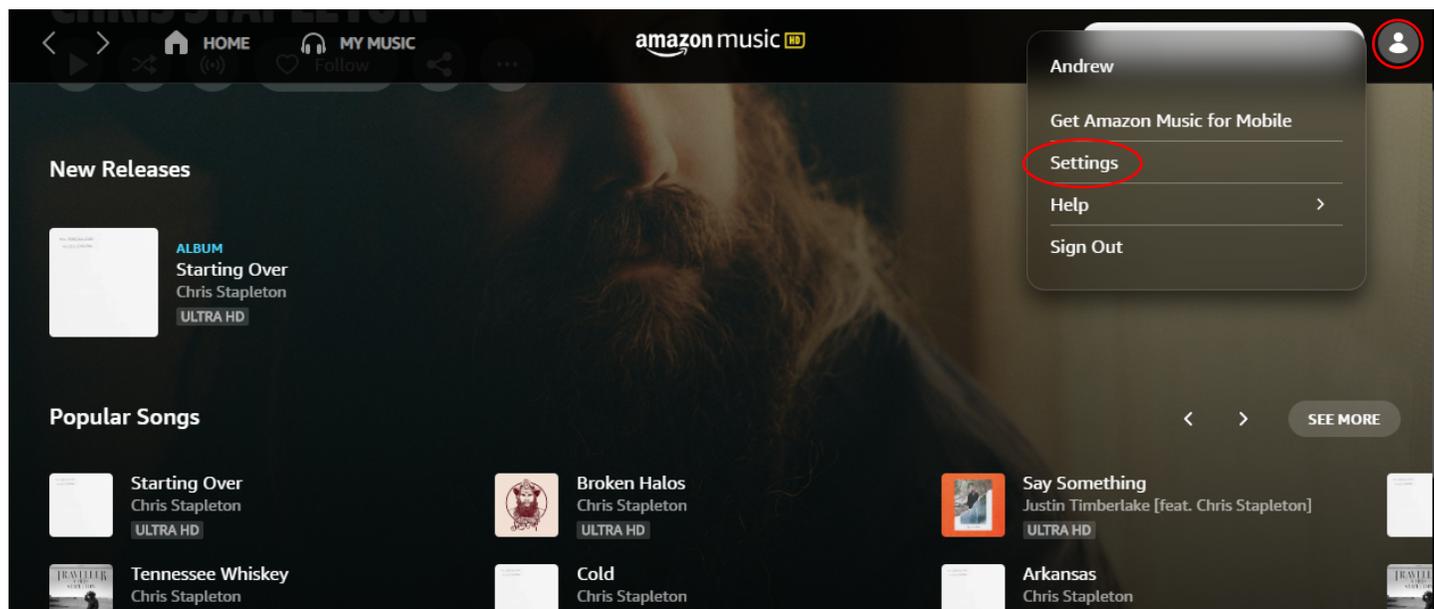

6 Configure the Advanced Preferences to force **HD quality** and make sure **Allow Exclusive Mode** is on. THX recommends disabling **Loudness Normalization** since it introduces additional processing.

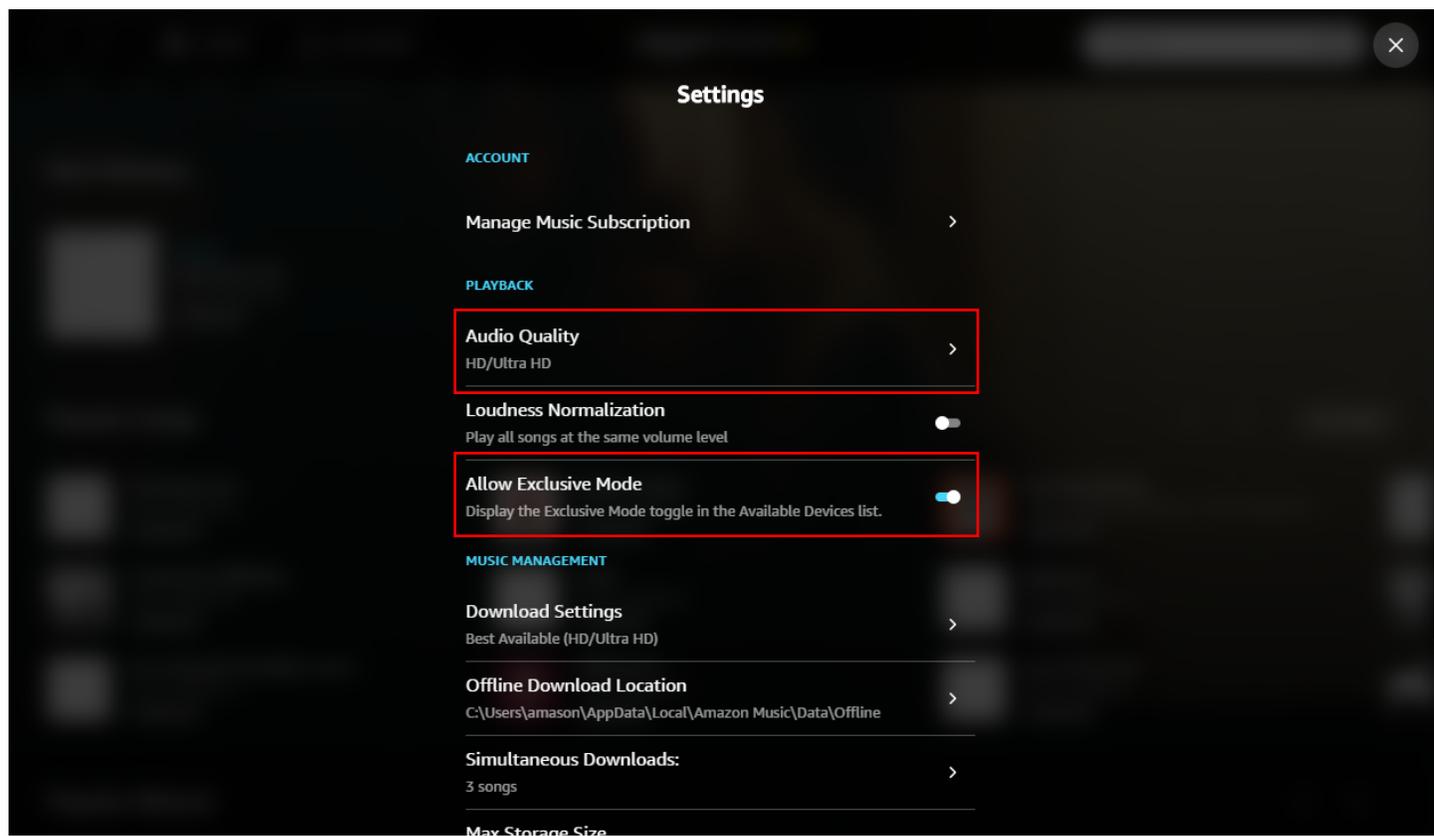


7 In the lower right corner, click the Available Devices icon and choose **THX Onyx USB Amplifier**. You can also enable **Exclusive Mode** here. (Note: Amazon Music HD does not yet have true bit-perfect exclusive mode, so Windows will up-sample the audio to the sample rate and bit depth you chosen in step 2 above. THX recommends setting the default format to 24 bit, 176.4 kHz or 192 kHz.)

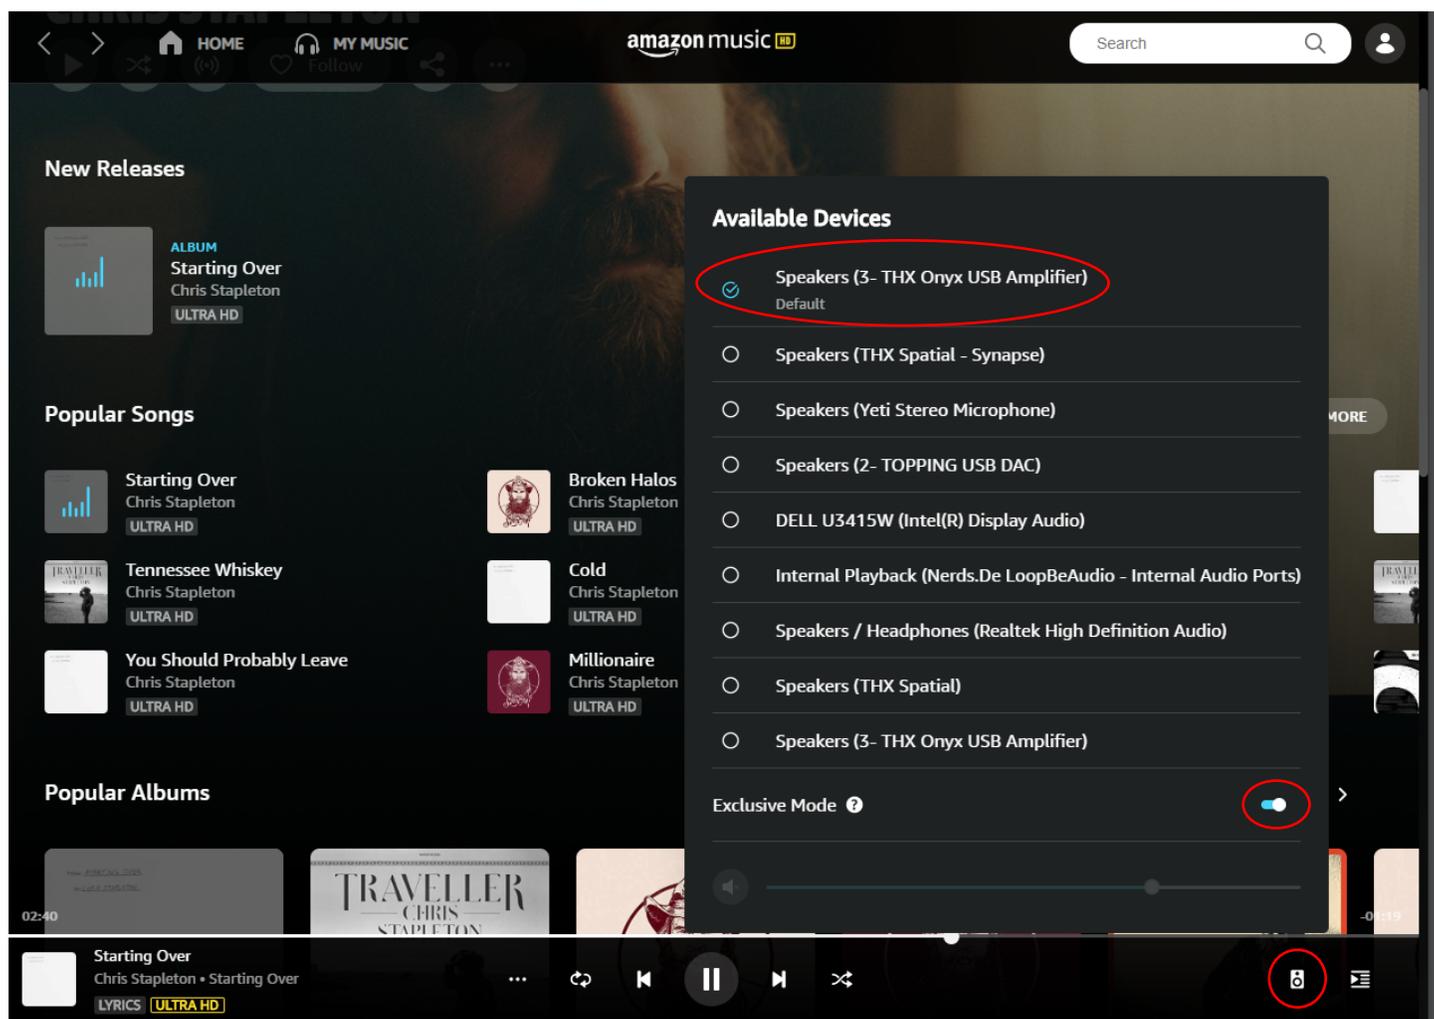

8 You are now ready to experience great audio on your THX Onyx! For more questions please visit thx.com/thx-onyx.

- 1 Connect the THX Onyx to one of your computer's USB-C ports, then plug your headphones into the THX Onyx.
- 2 Under Music Settings, make sure you have an HD account; if not, select Manage Subscription and upgrade to the Amazon Music HD plan.

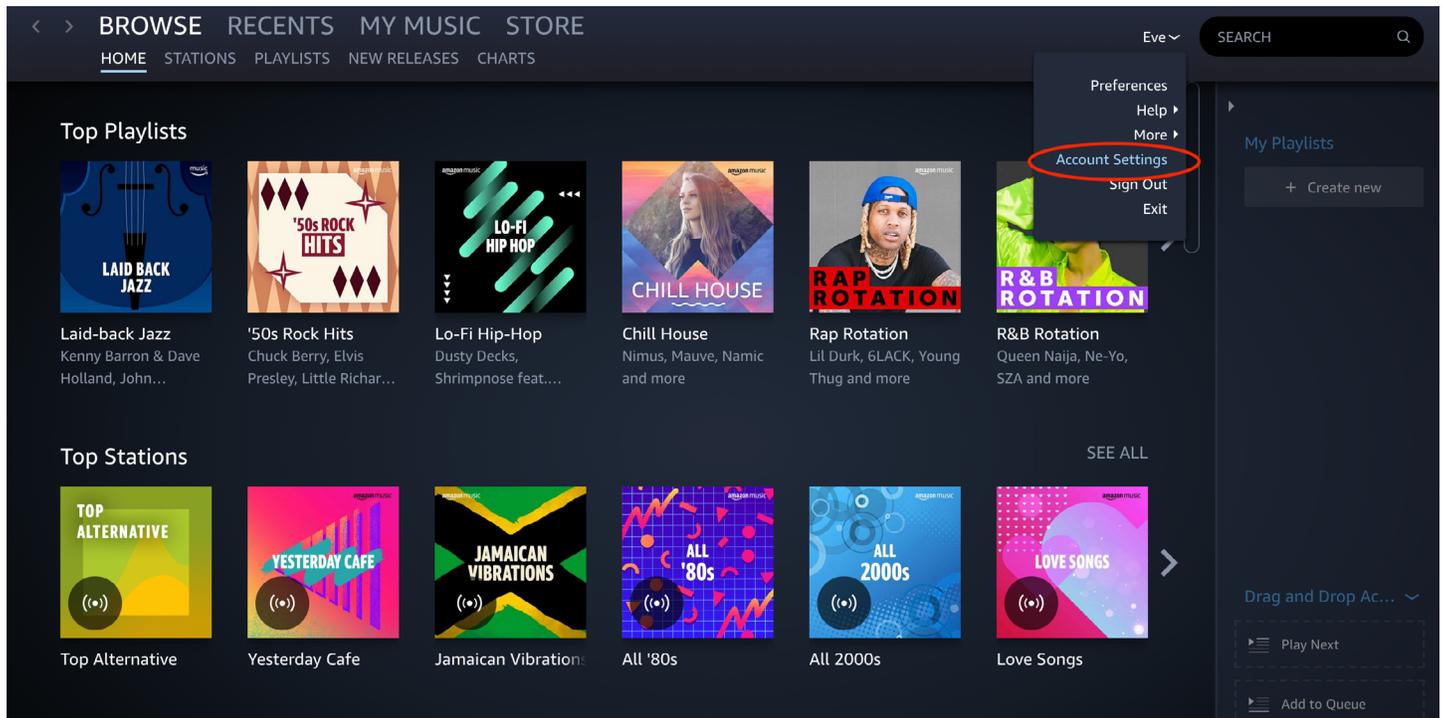

music

Amazon Music Unlimited

Plan	Price
<input checked="" type="radio"/> Individual HD monthly	\$14.99
<input type="radio"/> Family HD monthly	\$19.99
<input type="radio"/> Single Device monthly Details	\$3.99


Monthly discount and annual plans available for Prime members. [Try Prime](#)
[Are you a student?](#)

Subscription Renewal
 On December 4, 2020, your Individual Plan HD subscription will renew at \$14.99/month.


✓ A reminder will be sent to you on December 1, 2020
[Turn off reminder](#)
[Cancel subscription](#)

[Remove HD from my subscription](#)


3 In the Amazon Music menu, choose **Preferences**.

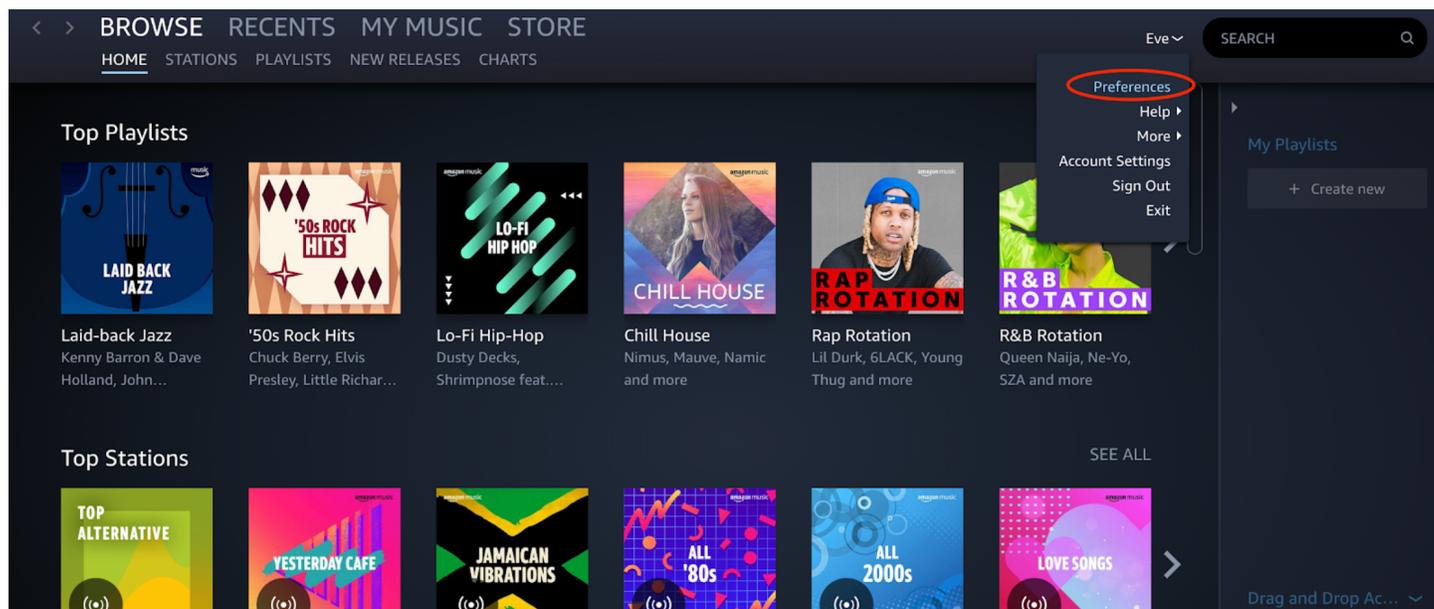


4 Configure the Advanced Preferences to force **HD quality** as below. THX recommends disabling **Loudness Normalization** since it introduces additional processing.

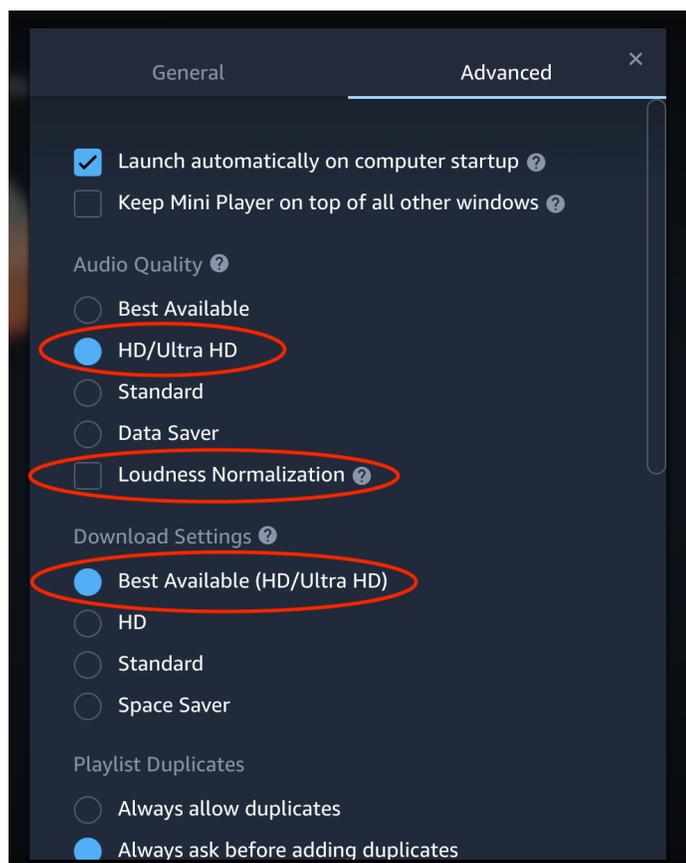

- In the lower right corner, click the **Available Devices** icon (track must be selected for this menu to appear)

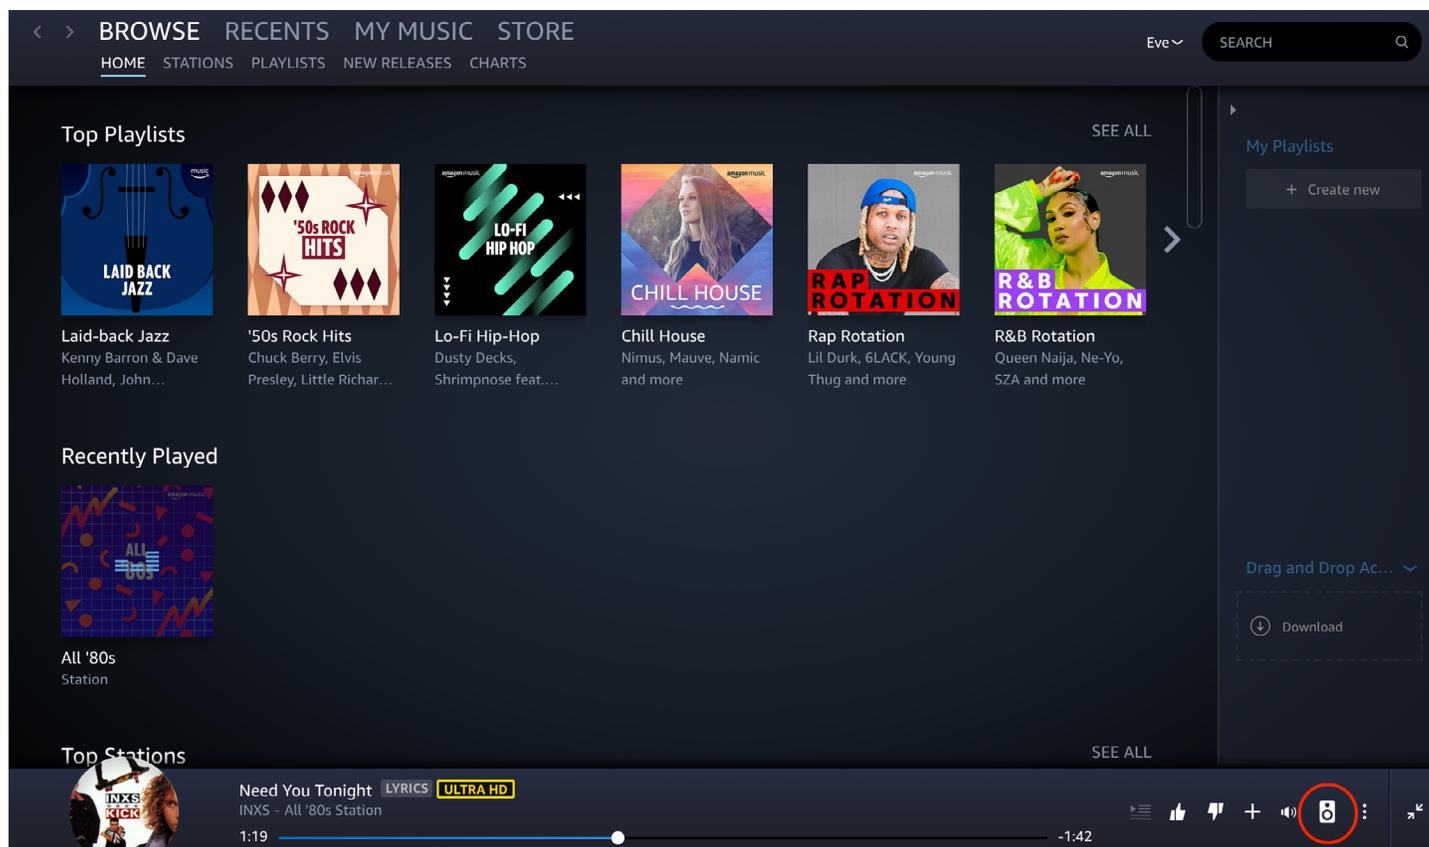


- Choose the audio device **THX Onyx USB Amplifier**, and enable **Exclusive Mode**.

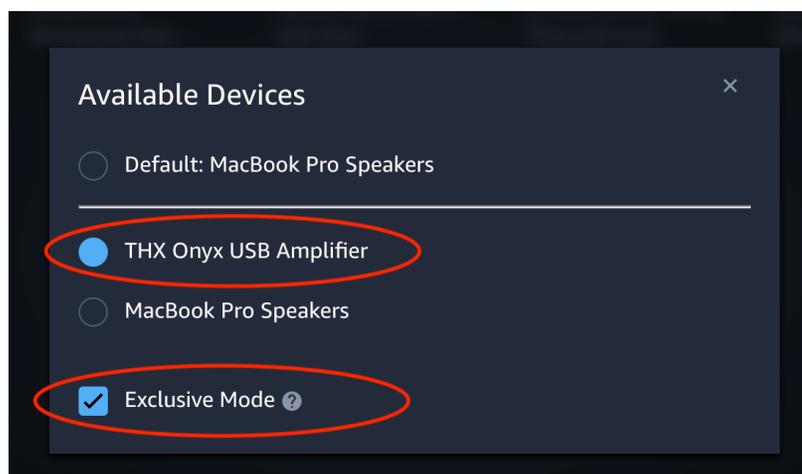


- You are now ready to experience great audio on your THX Onyx! For more questions please visit thx.com/thx-onyx.


- 1 Connect the THX Onyx to your Android device, then plug your headphones into the THX Onyx.
- 2 Launch the Amazon Music for Android app.
- 3 Tap the gear wheel at the top of the screen and choose **Music Settings**.

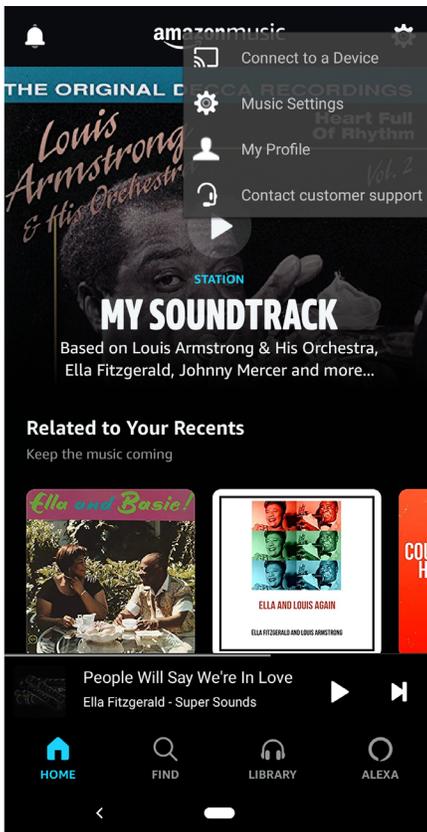

- 4 Under Your Account, verify you're logged in as an Amazon Music HD member. If not, sign up for the HD free trial or HD monthly plan.
- 5 Choose **Streaming Quality**. If your WiFi or mobile network permits the high data rate, set Streaming Quality to **HD/Ultra HD** for Wifi and/or Mobile Data (whichever you are using) as below.

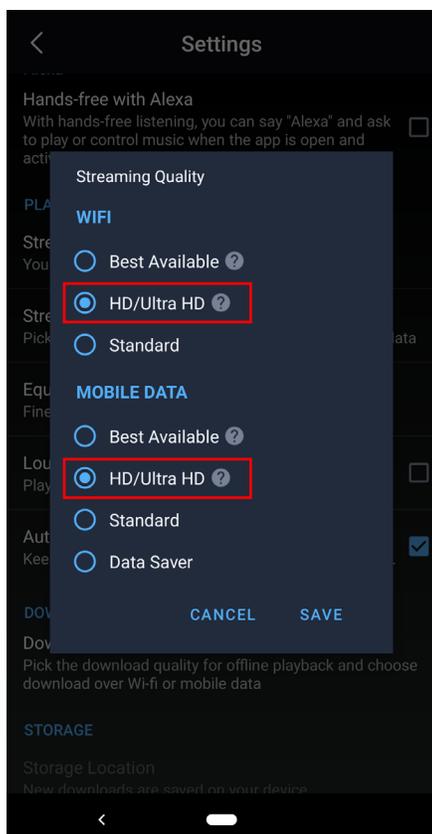

6 THX recommends disabling Loudness Normalization since it introduces additional processing.

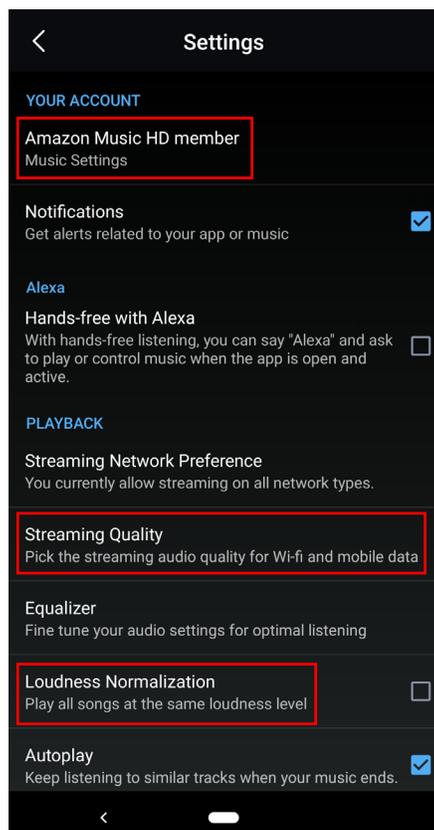


7 You are now ready to experience great audio on your THX Onyx! For more questions please visit thx.com/thx-onyx.


- 1 Using the USB-A adapter and a slim Lightning to USB Camera adapter as pictured below, connect the THX Onyx to your iOS device and then plug your headphones into the THX Onyx. *THX Onyx for iOS requires the slim Apple Lightning to USB Camera Adapter ([sold separately](#).) All other Lightning adapters are incompatible, including the wide Apple Lightning to USB 3 Camera Adapter.*




- 2 Launch the Amazon Music for iOS app.
- 3 Tap the gear wheel at the top of the screen and choose **Settings**.

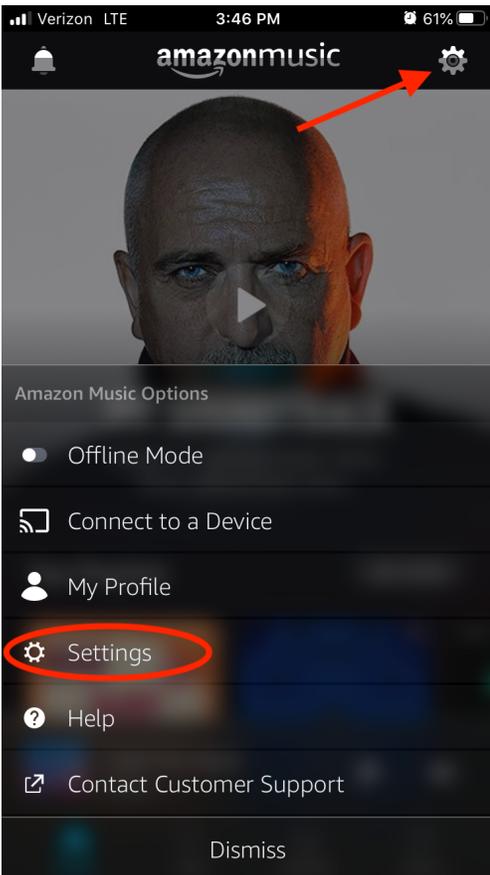


- 4 At the top of the Settings menu, verify you're logged in as an Amazon Music HD member. If not, sign up for the HD free trial or HD monthly plan.
- 5 Scroll down to choose **Streaming Audio Quality**.

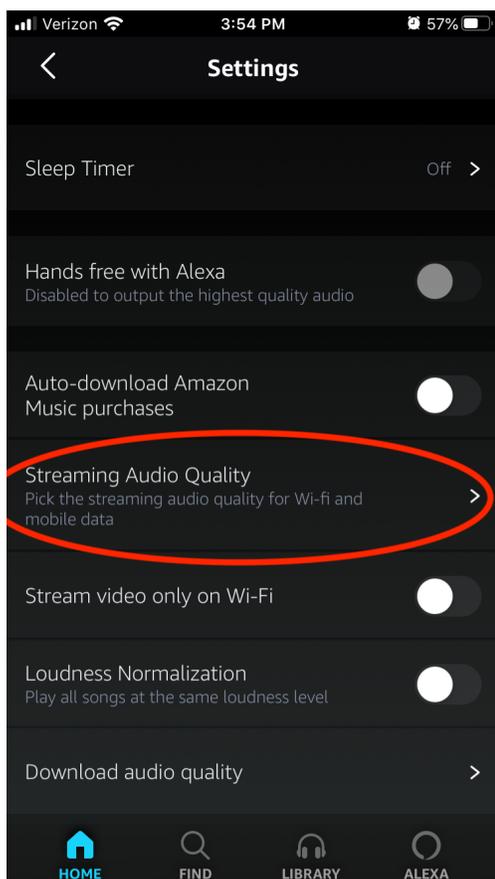

- 6 If your WiFi or mobile network permits the high data rate, choose **HD/Ultra HD** for Wifi and/or Mobile Data (whichever you are using) as below.

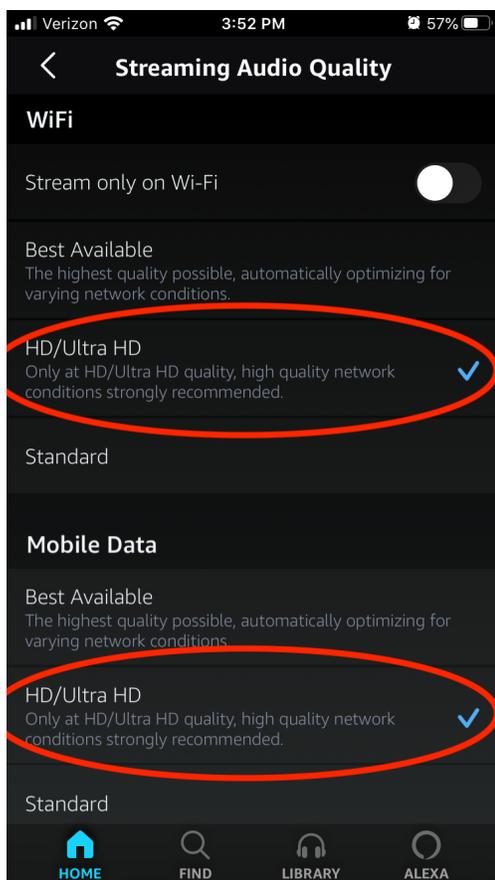

- 7 Navigate back to the settings menu. THX recommends disabling **Loudness Normalization** since it introduces additional processing.

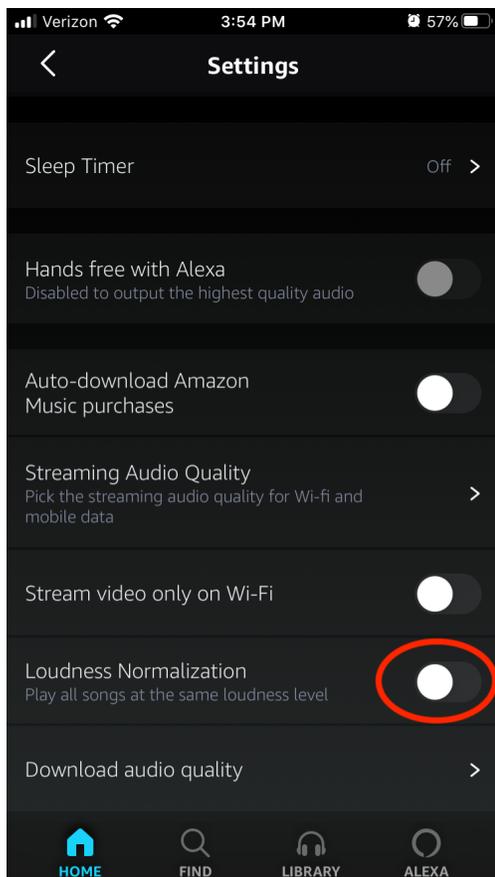

- 8 You are now ready to experience great audio on your THX Onyx! For more questions please visit thx.com/thx-onyx.